


## Guidelines for Measuring Windows

### New Construction

Measure rough opening in wall framing

### Renovating/Replacing Existing Windows

Measure from the exterior of the building, using the OSMBM (Outside Brickmold Measurement), that is from the outside edge of the window to outside edge of the window, as illustrated below.

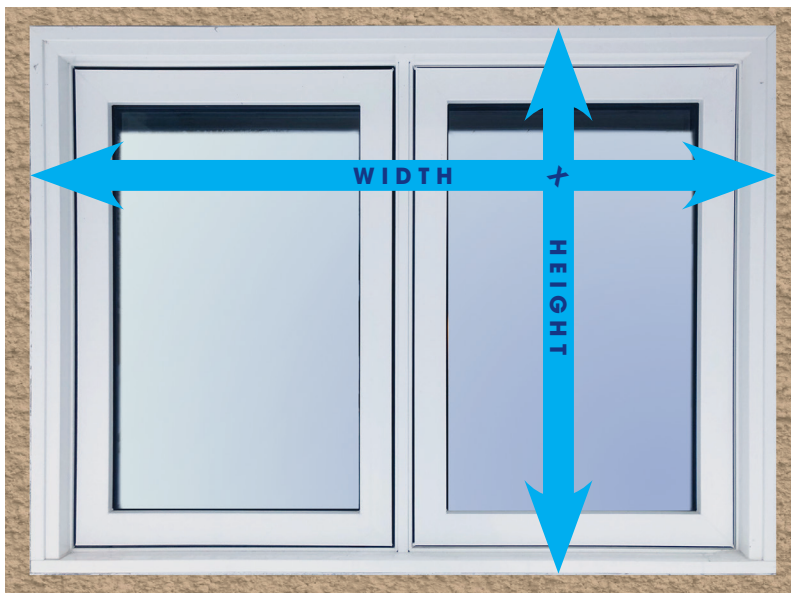

**ALL MEASUREMENTS TO BE PROVIDED IN  
INCHES AS WIDTH X HEIGHT**

### Wall Thickness

Indicate the wall thickness based off the construction of your building.

#### Available in:

- 4-1/2"
- 6-1/2"
- Custom  
*Window comes with 3-1/4" jamb with 3/4" return and 6" jamb extension loose.*